


WARNING

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -40°F to 104°F (-40°C to 40°C) and to be horizontally mounted with the LEDs facing down.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- MIN 167°F (75°C) SUPPLY CONDUCTORS.
- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- CAUTION - RISK OF FIRE.
- This product is not suitable for several special environments, such as places with corrosive gas liquids or high pressure water vapor.


Installation Guide

1. Loosen the M4*10 side screw and push the latch to release the access door.
2. Loosen the four M10 screws before sliding the fixture onto the tenon (not included).
3. Slip the fixture onto the tenon ensuring the tenon sits securely inside the light, adjust the horizontal angle if desired and retighten the four M10 screws.
Refer to the Horizontal Angle Adjustment section below for instructions on adjusting the horizontal angle of the light.
4. Connect the service leads to the terminal block.
4. Turn latch to reinstall the access door, then retighten the M4*10 side screw.

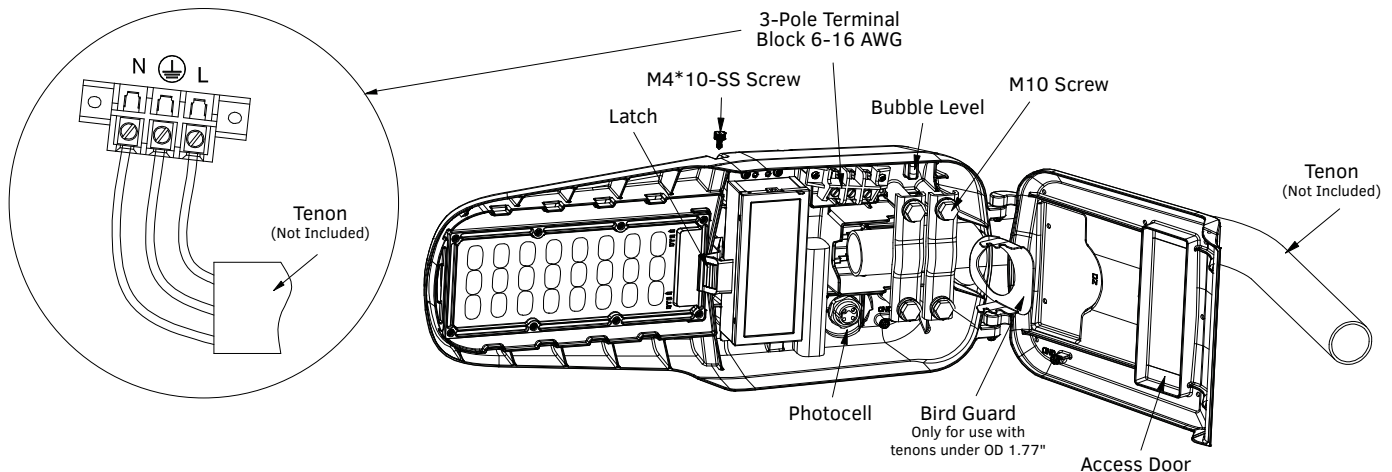

Horizontal Angle Adjustment

The horizontal angle of the fixture can be adjusted in 2.5° increments, up to ±5°, by placing the end of the tenon onto the step corresponding with the desired angle.

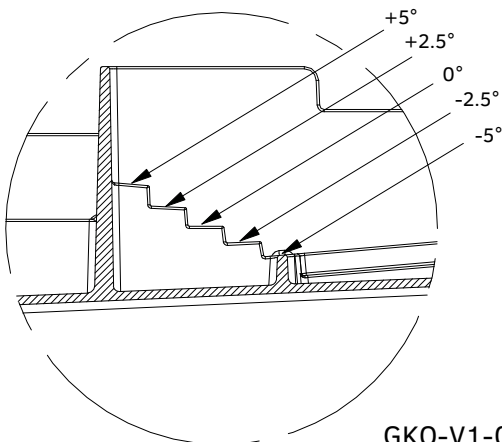

GKO-V1-0525-US

Wiring Diagram

Black		Line
White		Neutral
Green / Yellow Green		Ground
Purple		
Pink		

Note: Two dimming wires are in the driver box.