

WARNING


PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -40°F to 104°F (-40°C to 40°C) and to be horizontally mounted with the LEDs facing down.
- Minimum 194°F (90°C) supply conductors.
- This product is not suitable for several special environments, such as places with corrosive gas liquids or high pressure water vapor.


Installation Guide

1. Surface Mounting with J-Box


1. Loosen and remove the M4 screws used to attach the mounting plate, located on the sides of the fixture.

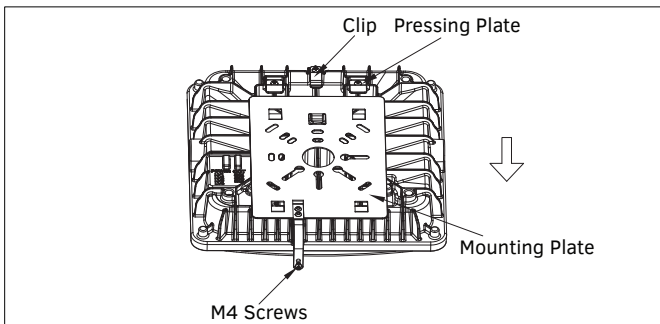


2. Attach the mounting plate to the ceiling using screws up to M5 (not included).

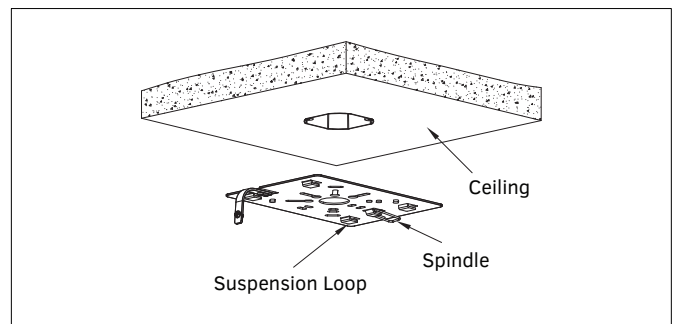

3. Connect the clip on the fixture to the spindle of the mounting plate to ensure the fixture will not slip and fall. Connect the line voltage to the fixture wires, following the wiring diagram. Push the pressing plate into the suspension loop on the mounting plate.

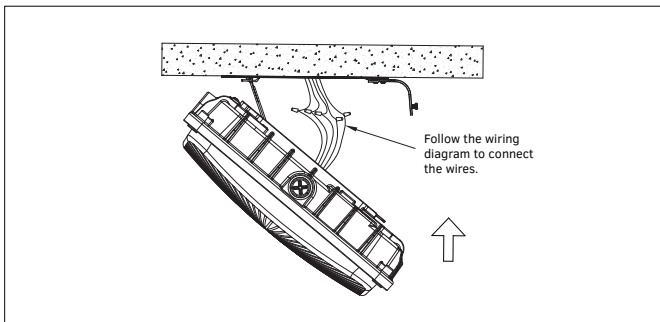


4. Reattach the fixture to the mounting plate using the M4 screws to complete installation.

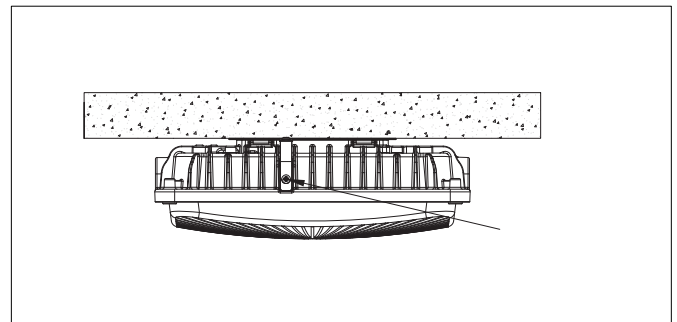


2. Pendant Mounting With 3/4" Conduit

1. Follow the wiring diagram to connect the line voltage to the fixture wires.
2. Screw the fixture onto the 3/4" conduit to complete installation.

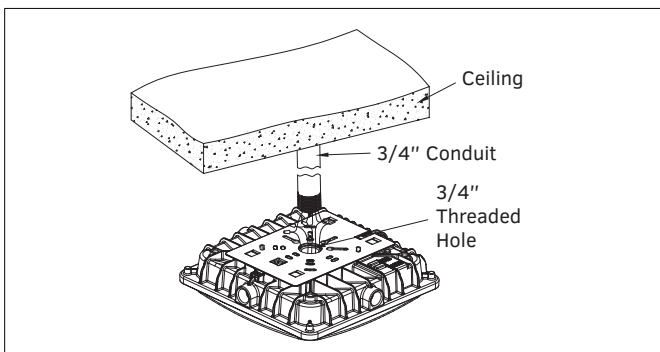

3. Power and CCT Adjustment Controls


Adjust the Power and CCT dial switches to the corresponding color temperature and power in the application requirements. It is recommended to set Power & CCT before installation.

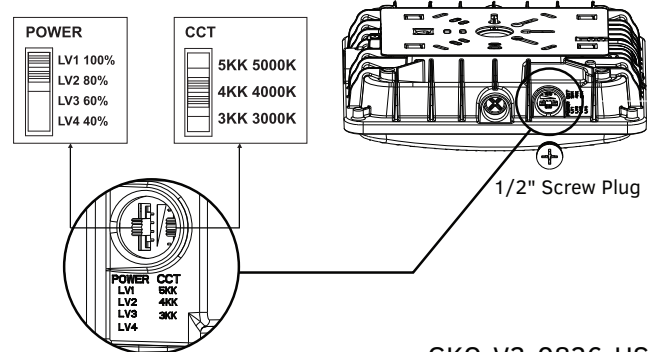


Top-Mounted Emergency Battery Backup Installation Guide (Special Order)

1. Surface Mounting with J-Box


1. Loosen and remove the PM4*16 screws from the sides of the emergency driver box and open the emergency driver box.
2. Unscrew the cover and unplug the emergency driver test button interface. Then remove the back housing of the emergency driver box.

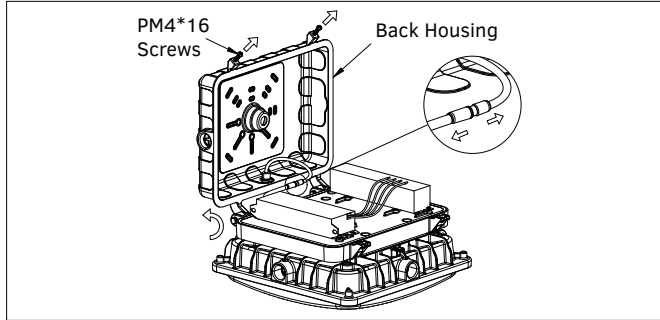


5. Suspend the fixture body from the attached back housing.
6. Complete the internal wiring as per the wiring diagram.
7. Reconnect the emergency driver test button interface.

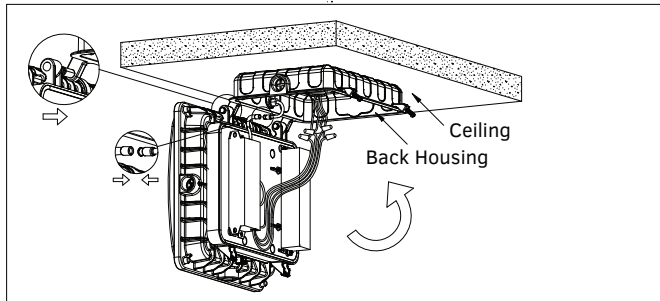

3. Take out the EVA pad from the carton, peel off the film, and attach it to the back housing of the emergency driver box making sure the knockout pattern on the EVA pad aligns with the knockout pattern on the back housing.
4. Straighten the J-Box wiring, then pass it through the EVA pad and the 3/4" threaded hole in the back housing, then secure the back housing to the ceiling using #8-32x3/4" screws (not included).

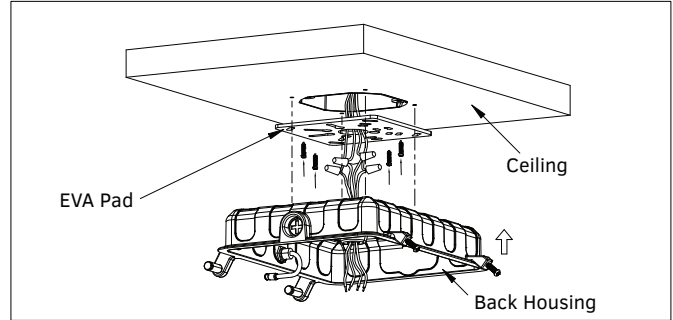


8. Reattach the fixture to the back housing using the previously removed PM4*16 screws to complete installation.

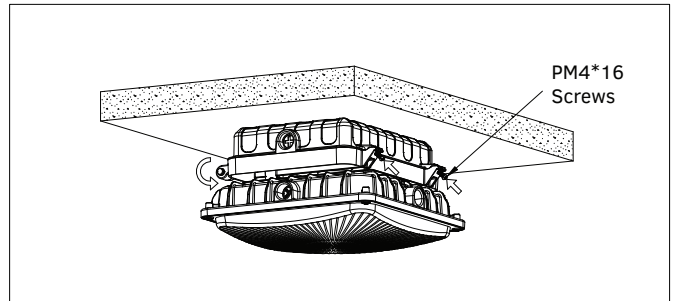


2. Pendant Mounting With 3/4" Conduit


1. Loosen and remove the PM4*16 screws from the sides of the emergency driver box and open the emergency driver box.
2. Unscrew the cover and unplug the emergency driver test button interface. Then remove the back housing of the emergency driver box.

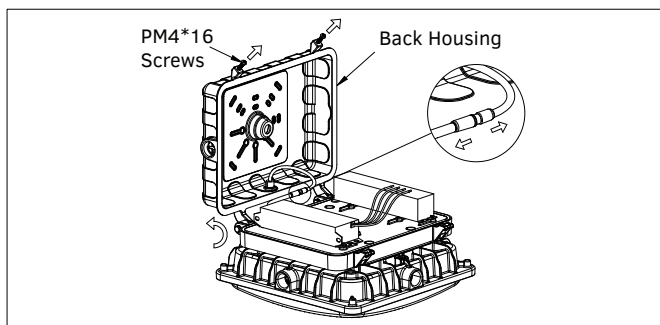

4. Suspend the fixture body from the attached back housing.
6. Complete the internal wiring as per the wiring diagram.
7. Reconnect the emergency driver test button interface.
8. Reattach the fixture to the back housing using the previously removed PM4*16 screws to complete installation.

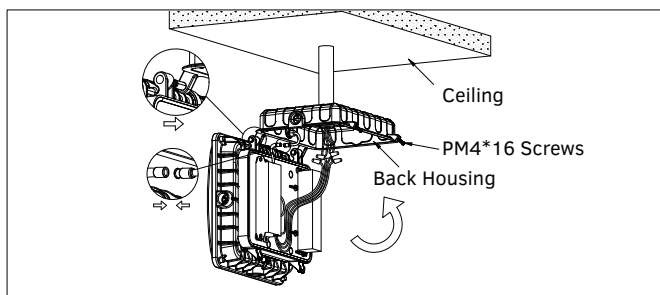

3. Straighten the wiring inside the 3/4" conduit, then pass it through the silicone plug accessory and the 3/4" threaded hole in the back housing, in that order. Then align the 3/4" threaded hole on the back housing with the 3/4" conduit and tighten the connection until it's secure.

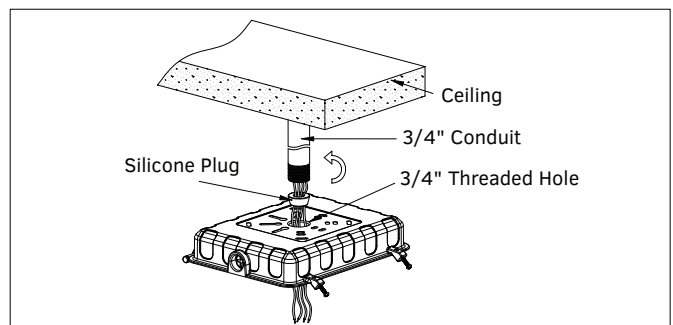

Wiring Diagram

Note: Two dimming wires are in the driver box.

WITHOUT EMERGENCY BATTERY

LED FIXTURE	Black	Line
	White	Neutral
	Green/Yellow Green	Ground
	Purple	DIM+
	Pink	DIM-

WITH EMERGENCY BATTERY

LED FIXTURE	Red	AC Line(24/7)
	Black	AC Line Switch
	White	Neutral
	Green/Yellow Green	Ground
	Purple	DIM+
	Pink	DIM-